


◆ I/O 위치 및 회로 구성


▶ [CN16] KEYPAD

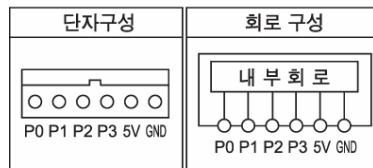

▶ [CN9] 5V OUT



▶ [CN4] PWM OUT

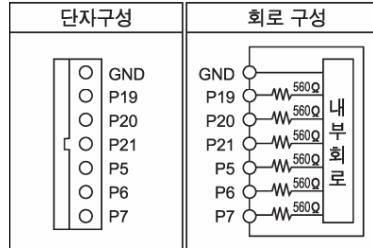

▶ [CN2]

다운로드 포트	핀 기능
5 4 3 2 1	사용안함
9 8 7 6	
D-Sub 9Pin	


▶ [CN1]

RS-232 통신 포트	핀 기능
5 4 3 2 1	사용안함
9 8 7 6	TX
D-Sub 9Pin	RX
6 GND	DTR
7 사용안함	
8 사용안함	
9 VCC(5V)	


▶ [SW2] AD 입력전압

SW2	입력전압
OFF	5V
ON	10V


▶ [CN19] High Count

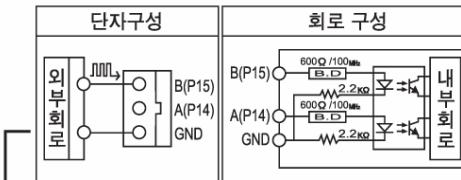

▶ [CN15] AD INPUT

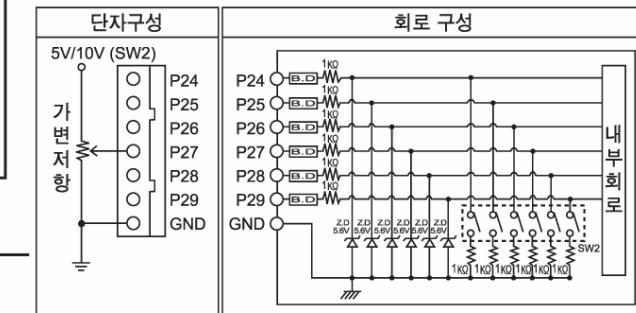

▶ [CN12] CuNET

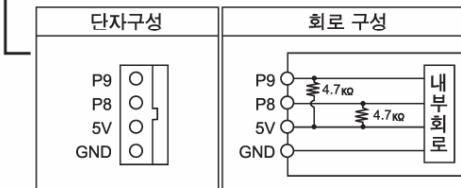

▶ INPUT

